## FLEISCHMANN PERFEKTION & VIELFALT



# z21start and WLAN-Package





## Overview

New Startsets with "z21start"	Page 3
<ul> <li>The "WLAN-Package"</li> <li>How to get the "activation code"</li> </ul>	Page 4 Page 5
The Maintenance-Tool	Page 6 - 7
Connection between PC and z21/Z21	Page 8 – 10
New digital components suitable for z21/Z21	Page 11 - 12

### New Startsets with "z21start"

"Z21-start" is replacing the old "Mulitmouse" controller in startersets. This will give your customers a variety of benefits:

- CVs now readable
- Dataformats are now DCC and Motorola
- RailCom-compatible
- WLAN-compatible via optional module WLAN-Package (Art. Nr.: 10814)
- Wireless controller via optional module WLAN-multiMaus (Art. Nr.: 10813)
- PC Interface via optional module WLAN-Package (Art. Nr.: 10814)
- Compatible with large layouts via optional module CDE-Booster-Adapter (Art. Nr.: 10789)

Note: Z21-start is delivered with the LAN-plug disabled for control and driving inputs. However, you can receive updates and change the setup with the optional "Maintenance-Tool".




## The "WLAN-Package"

The WLAN-Package (Art. Nr.: 10814) includes an activation code for the LAN-plug and a pre-configured router.

After activation of the LAN-plug you can control the setup via smartphone, tablet, WLANmultimouse (Art. Nr.: 10813) or PC.

The picture to the right shows the manual that is included in every starter-set.

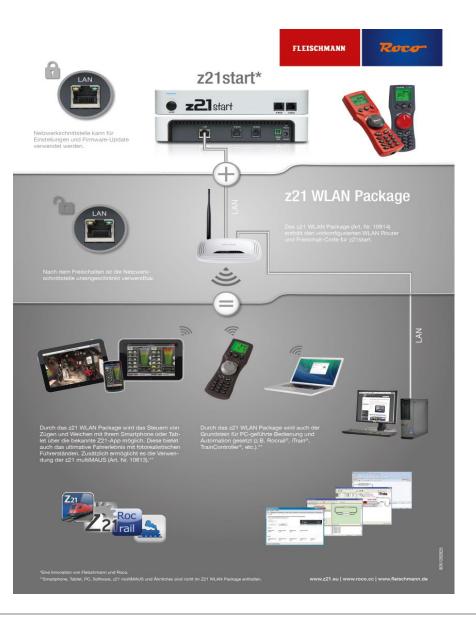

#### Roco

## WLAN-Package (Art. Nr.: 10814) Instructions: How do I get the activation code?

Here is the PDF manual on how to obtain the activation code:



PDF-Datei

## The "Maintenance-Tool"

The "maintenance-tool" is our service-protocol for z21/Z21 and SmartRails and should be used by every owner of a z21/Z21 or a SmartRail!

Depending on the connected device there are various options available:

#### z21 and Z21:

- Firmware Update
- Update multiMaus
- Change general settings
- Change IP-settings
- Manage the R-BUS
- CV programming

#### Additionally with Z21:

- Manage LocoNet
- Decoder Update for Zimo Decoder

#### SmartRail:

- Firmware Update
- Change general settings
- Change IP-settings
- SmartRail Status
- SmartRail settings



## The "Maintenance-Tool"

The "maintenance tool" can be downloaded in the download section @ <u>www.z21.eu</u>.

You will also be able to enter the activation code via the maintenance-tool in the near future.

Important: Once you have the maintenance tool installed, it does not update itself automatically! Please check regularely online whether a newer version is available!

Instructions for "z21" are also applicable for "z21start".




## Connecting a PC and z21/Z21

We recommend to connect the router of the z21/Z21 to a PC via LAN-cabel or WLAN. This way there are no set-up changes to your PC necessary.

For connections without a router, the PC's system settings must be configured for a static IP-adress. To do so follow these steps:

- 1. Go to network settings on your PC
- 2. Select LAN-connection and open the connection status.

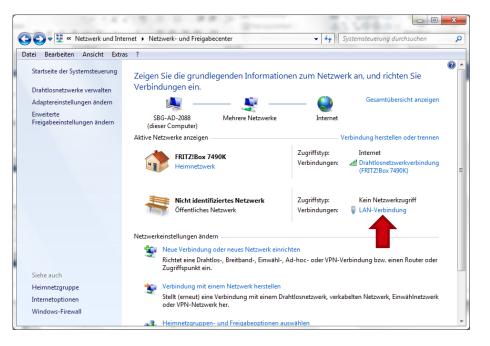

## Connecting a PC and z21/Z21

3. Open the settings for the LANconnection

Ę	Status von LAN-Verbindung
	Allgemein
	Verbindung
	IPv4-Konnektivität: Kein Netzwerkzugriff
	IPv6-Konnektivität: Kein Netzwerkzugriff
	Medienstatus: Aktiviert
	Dauer: 00:15:56
	Übertragungsrate: 100,0 MBit/s
	Details
	Aktivität
	Gesendet — Empfangen
	Pakete: 288 0
	Eigenschaften     Oiagnose     Diagnose
	Schließen

4. Open the settings for the internetprotocol version 4


Eigenschaften von LAN-Verbindung	x
Netzwerk Freigabe	
Verbindung herstellen über:	
Broadcom NetXtreme 57xx Gigabit Controller	
Diese Verbindung verwendet folgende Elemente:	:n
Kaspersky Anti-Virus NDIS 6 Filter QoS-Paketplaner Datei- und Druckerfreigabe für Microsoft-Netzwerke Abroadcom Advanced Server Program Driver <p< td=""><td></td></p<>	
Beschreibung TCP/IP, das Standardprotokoll für WAN-Netzwerke, das de Datenaustausch über verschiedene, miteinander verbunder Netzwerke ermöglicht.	
OK Abbr	echen



## Connecting a PC and z21/Z21

- 5. Change to "use following IP address" and manually enter the IP address as shown to the right.
- 6. Open the "maintenance tool" and connect your PC with the z21start/z21/Z21.

atei Optionen Hilfe	2			
tatus Einstellungen IP	Einstellungen Firmware L	Jpdate		
rebindung				
	elle IP-Adresse der Zentral tellung ist 192.168.0.111	e an und aktivieren Sie die	verbindung.	
	teliung ist 192.100.0.111			
IP-Adresse			7.	
192.168.0.111			Zi	רכ
Verbinden	Trennen		Digital	system
rersionen				
Seriennum	Firmware Version:	Hardware Typ:	Hardware Version:	
119098	V1.21	z21	1	
ystem				
Eingangsspannung:	Interne Spannung:	Hauptgleis-Strom:	Proggleis-Strom:	Temperatur:
20,3 V	20,3 V	1 mA	-	31 °C

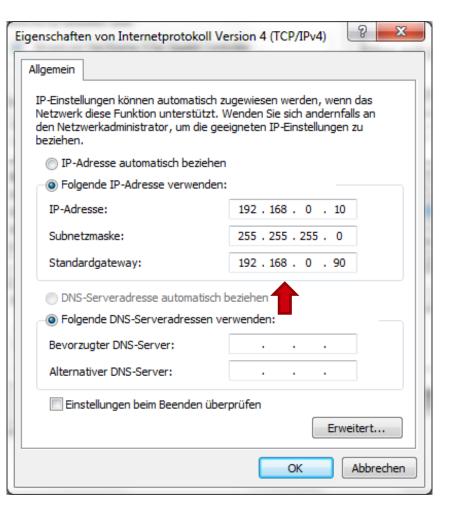

## New digital components suitable for z21/Z21

With our new digital components, you will be able to use the full z21/Z21 potential including in the area of booster and feedback modules:

## Booster (Art. Nr.: 10806) and Dual-Booster (Art. Nr.: 10807)

3A and 2x3A respectively, RailCom-Global-Detector, integrated electrical feeding for a loop, integrated break-generator, updateable via Z21, trackvoltage manageable via Z21

Note: Power supplies are NOT included for the Booster (Art. Nr.: 10806) and the Boosterlight (Art. Nr.: 10805) (see next page)! You can use our switching power supply (Art. Nr.: 10851) to operate these devices.





## New digital components suitable for z21/Z21

With our new digital components, you will be able to use the full z21/Z21 potential including in the area of booster and feedback modules:

#### Booster light (Art. Nr.: 10805)

3A, RailCom-Cutout, integrated electrical feeding for a loop

#### Z21 Detector (Art. Nr.: 10808)

Occupancy detector and feedback for 8 sections via power survailance, locomotive identification via RailCom, updateable, optionally also for up to 8 track/reed contacts

Attention! The product picture to the right is from a pre-series model! The actual detector will also receive a black housing and can ONLY be used via the CAN-Bus on the black Z21!

