



ROBUR MIT SOLDAT H0 1935

de Vor Gebrauch die Sicherheitshinweise und Anleitung genau lesen und beachten.

Vor dem Zusammenbau sollten Sie sich mit den Einzelteilen vertraut machen, diese sorgfältig abtrennen und ggf. z.B. mit feinem Schmirgelpapier entgraten. Vor der Montage die Teile gemäß der Anleitung vorsortieren. Zum Verkleben (wenig Klebstoff verwenden) empfehlen wir Alleskleber (z.B. UHU® Kraft). Dieser Bausatz wurde sorgfältig gepackt. Sollte trotzdem ein Teil fehlen, können Sie es unter Angabe der Artikelnummer die-

ses Bausatzes direkt bei Bosch anfordern.


en Read and follow these safety precautions and instructions carefully before use.

fr Avant d'utiliser ce produit, veuillez lire et suivre attentivement les consignes de sécurité et le mode d'emploi.

it Prima dell'uso leggere attentamente le istruzioni per l'uso e le avvertenze di sicurezza.

es Antes de montar leer las instrucciones de seguridad e indicaciones de montaje.

nl Voor gebruik de veiligheidsaarschuwingen en instructies goed lezen en opvolgen.

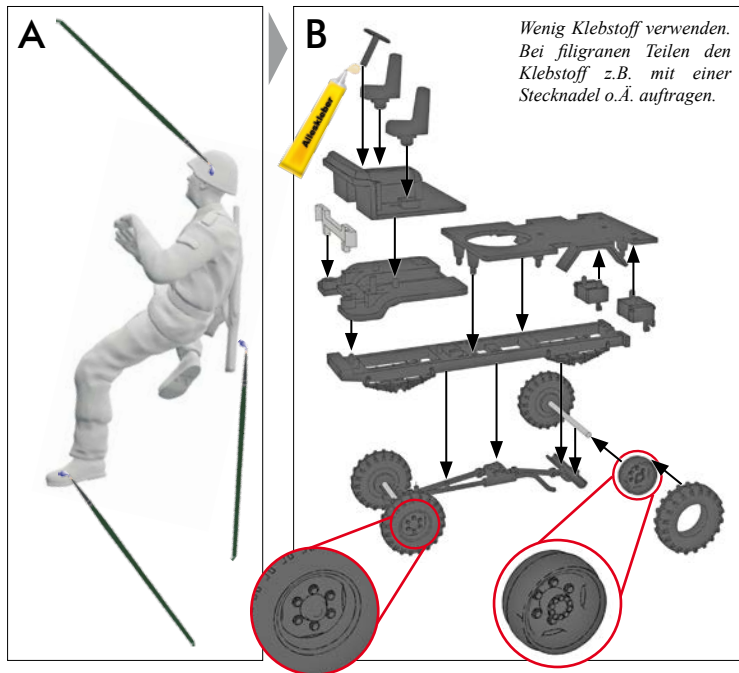

The diagram shows a white truck with several arrows pointing to different parts, indicating where 'Alleskleber' should be applied. The arrows point to the front bumper, the side mirrors, the front grille area, the side door, the rear wheel arch, and the rear of the cargo box. Two tubes of 'Alleskleber' are shown, one at the top left and one at the bottom right, with arrows pointing from them to the respective application points on the truck.